



Remove


- 1 Remove rear seat and rear seat back (91—170).
- 2 Unscrew screws at the cover plate and remove cover plate.
- 3 Remove crank handle (72—110) and prise off operating switch for electric window lifter.
- 4 Remove trim at the rear column (68—449, section B).

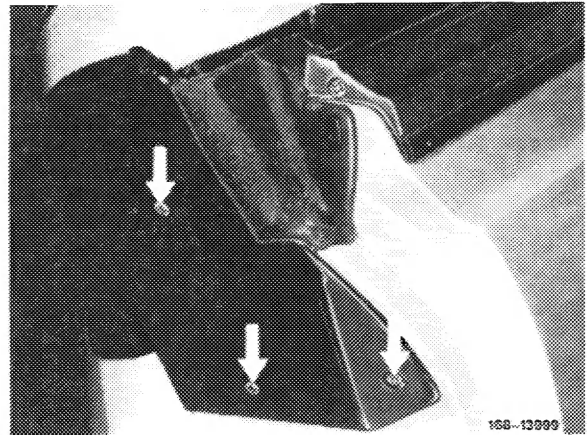


- 5 Remove screw in the top rear quarter panel.

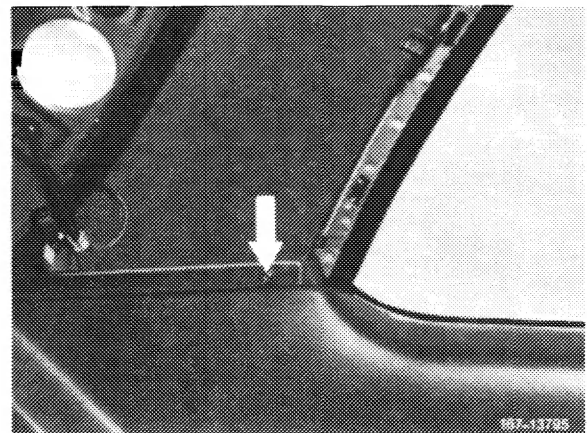

- 6 Pull out rear quarter panel at the lower clip hole.

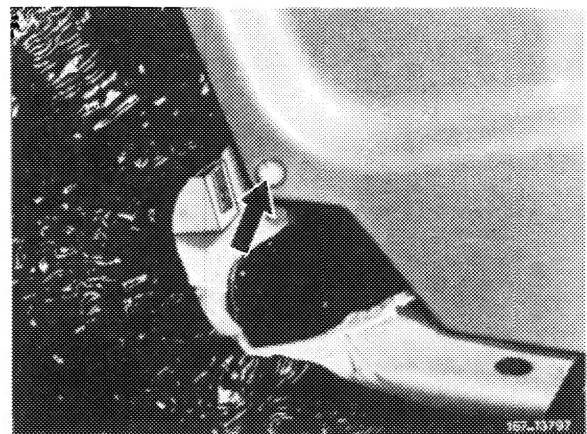


7 Starting at the top front, prise rear quarter panel off the clips by means of a plastic wedge.

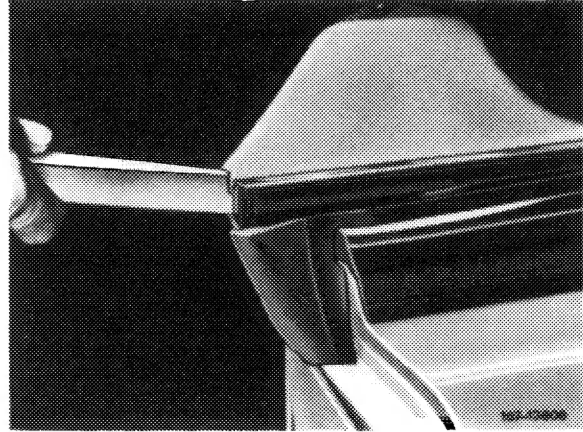

8 Unscrew safety belt at side member (91–500, section B).

9 Thread belt webbing with lock plate through the opening in the rear quarter panel.

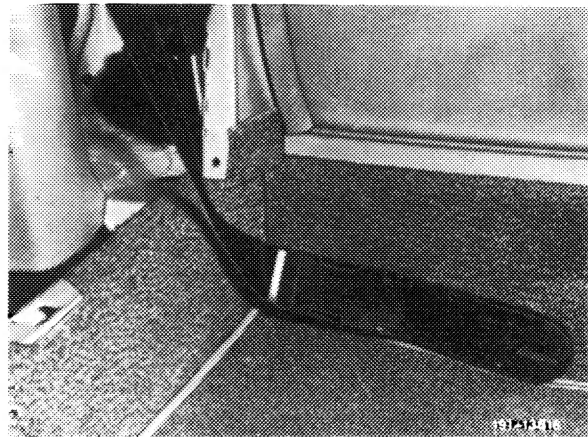

Install

10 Installation takes place in reverse order.